
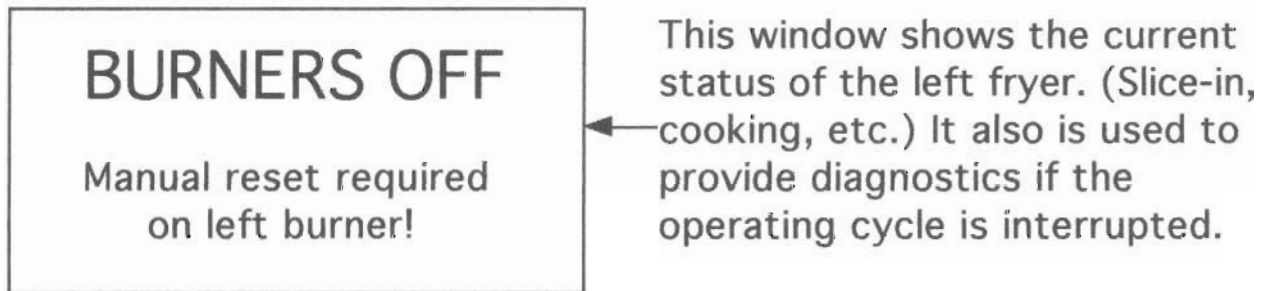


LEFT KETTLE 000 C LEFT KETTLE TEMP		TYRRELLS Now Cooking <i>SWEET POTATOES</i>			RIGHT KETTLE 000 C RIGHT KETTLE TEMP			
Burners	Kettle Operation	000 Kg SCALE WEIGHT			Kettle Operation	Burners		
OFF	OFF				OFF	OFF		
BURNERS OFF			BURNERS OFF					
Manual reset required on left burner!			Manual reset required on left burner!					
Single Batch	Rake Out	Reset Stirrer	Reset Stirrer	Rake Out	Single Batch			
Screen Change		Screen Change		Screen Change		Screen Change		
Left Kettle Controls	Left Kettle Speeds	Manual Controls	Product Menu	Centrifuge Controls	Advanced Controls	Infeed Controls	Right Kettle Speeds	Right Kettle Controls

HOME SCREEN

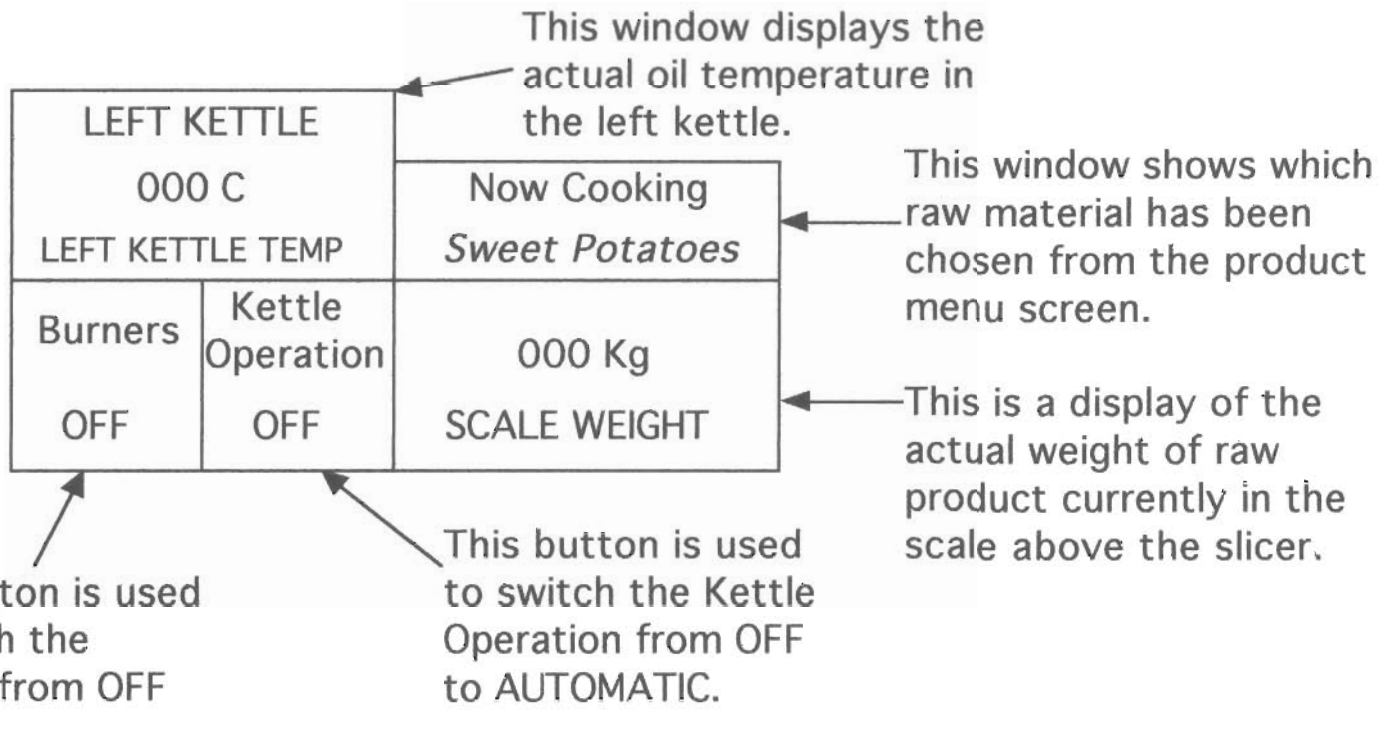

Single Batch

This button is used to start one batch through the left kettle when the Kettle Operation button above is in the OFF position. The batch will be cooked and raked out automatically, but after rake out the fryer will not call for another batch. In order to return to automatic operation push the Kettle Operation button above to automatic.

Rake Out

The Rake Out button is used to start a rake out cycle at any time during the cooking cycle.

Reset Stirrer

Reset Stirrer will stop the stirrer at any time. To restart the stirrer go to the Kettle Control screen and push the Stir Auto button.

The right hand side of the Home Screen is a mirror image of the left side, and is used to operate the Right Kettle.

The buttons across the bottom of the Home Screen are pressed to move to another screen.