


Kettle Temp 000	LEFT KETTLE CONTROLS			Burner Setpoint 000	
Rake Out Temp 000	Now Cooking <i>Parsnips</i>			Fan Turnup Time 000	
Discharge Time 000	Cool Down 000	Slice Temp 000	Drop Temp 000		
Rake Out	FLAME FAILURE			Stirrer Reset	
Stir Auto	Left Kettle E-Stop Activated			Oil Fill Automatic	
Screen Change Screen Change Screen Change Screen Change					
Home	Left Kettle Speeds	Manual Controls	Infeed Controls	Advanced Controls	Right Kettle Controls

LEFT KETTLE CONTROLS

(2 pages)

Left side of screen

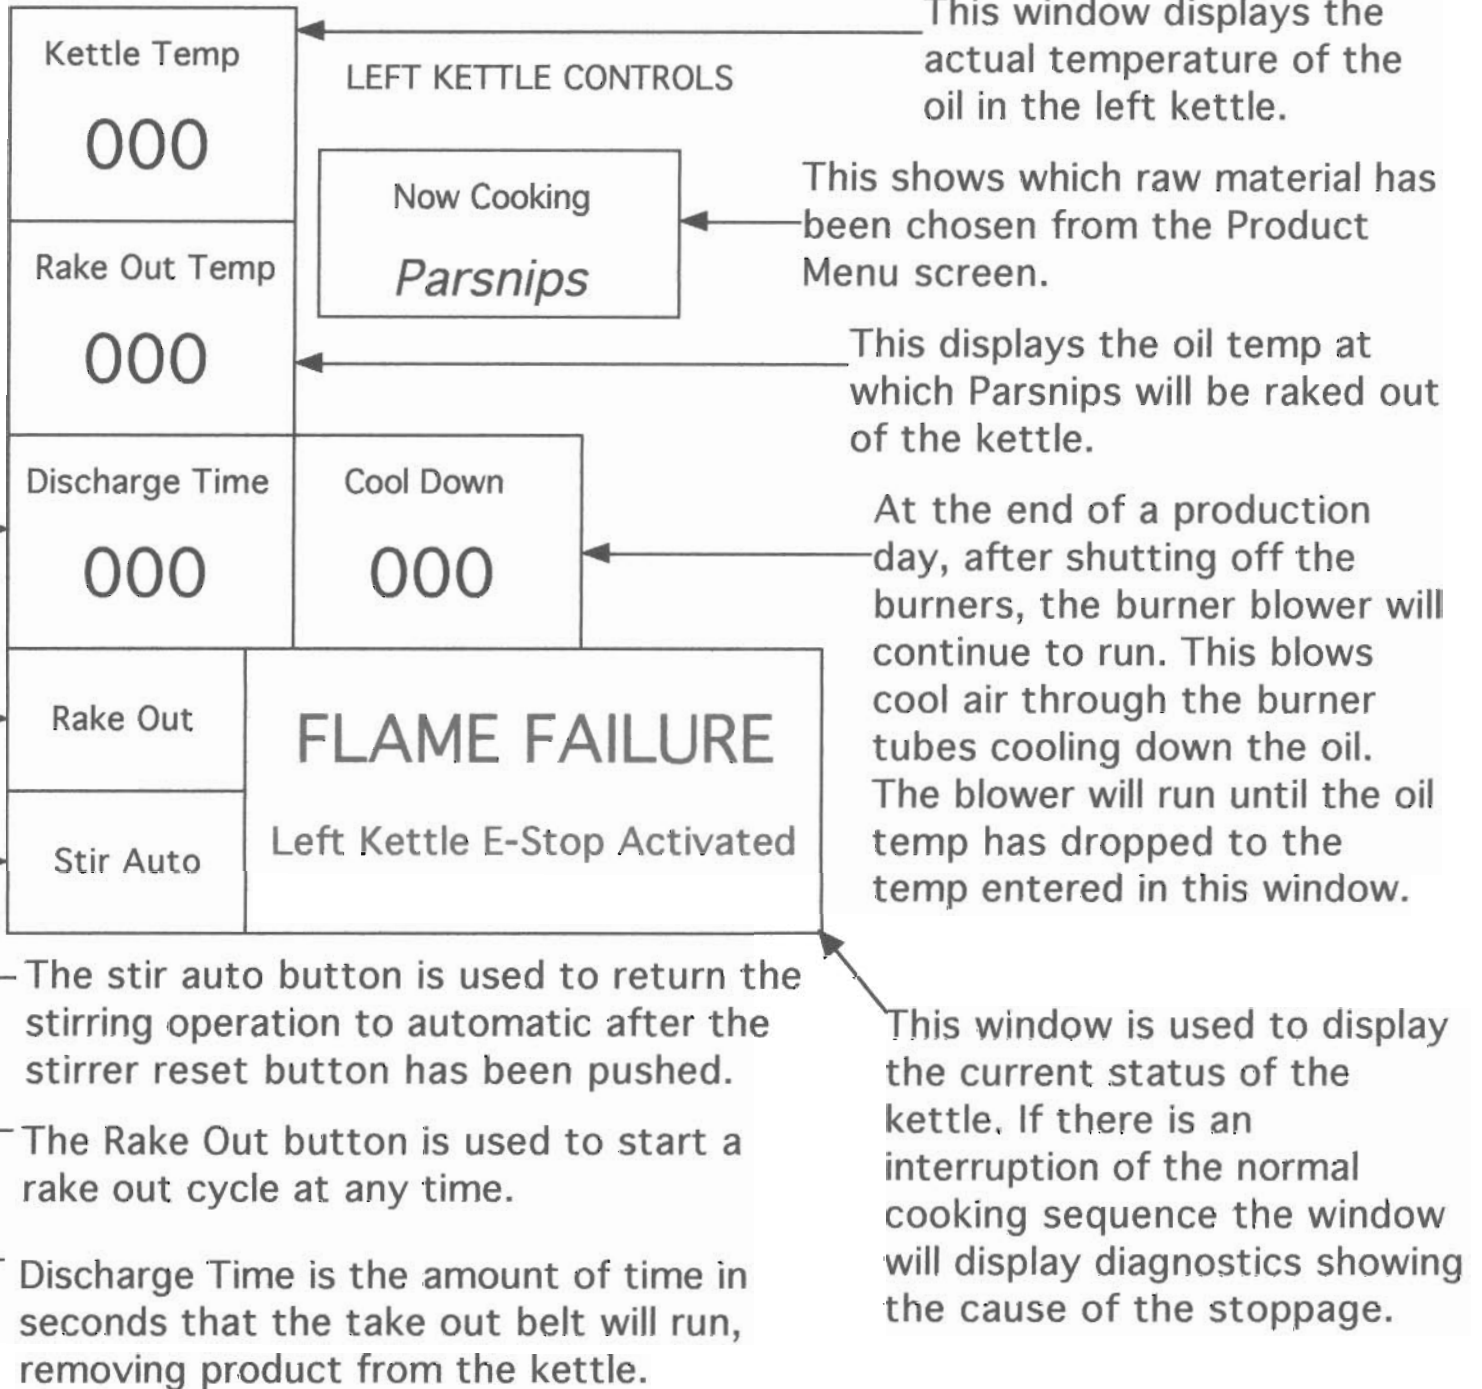

LEFT KETTLE CONTROLS (page 2)

Right side of screen

LEFT KETTLE CONTROLS

Now Cooking
Parsnips

Burner Setpoint 000
Fan Turnup Time 000
Slice Temp 000
Drop Temp 000

This button is used to set the temperature at which the burners will shut down after cooking a batch of Parsnips.

This is the number of seconds the steam fan will remain on HI after the start of slice-in. To change this value, press the value showing, then when the change screen appears, press in a new value, then press Enter.

The Drop Temp is the temperature at which the burners will relight after slice-in of Parsnips. If no temperature drop is desired, this value should be set to match the Burner Setpoint.

This is the temperature at which the fryer will call for slices while cooking Parsnips. Slices will be delivered if the scale is full and the pilot flame is burning.

FLAME FAILURE Left Kettle E-Stop Activated	Stirrer Reset
	Oil Fill Automatic

This button is used to stop the stirring cycle at any time. To restart the stirring cycle push the Stir Auto button on this screen.

This button allows the PLC to close an external dry relay which can be used to start an oil pumping system supplied by the customer. This oil fill system only operates during the rake out cycle, when the oil level is true.

This window is used to display the current status of the kettle. If there is an interruption of the normal cooking sequence the window will display diagnostics showing the cause of the stoppage.

By pressing these buttons along the bottom of the screen you can move to that other screen

Home	Left Kettle Speeds	Manual Controls	Infed Controls	Advanced Controls	Right Kettle Controls
------	--------------------	-----------------	----------------	-------------------	-----------------------