

# Left Kettle Speed Adjustments

Stirrer  
Traverse Speed

000

Hood Fan  
High Speed

000

Hood Fan  
Low Speed

000

Stirrer  
Rotation Speed

000

Stirrer Rake Out  
Traverse Speed

000

Speed Adjustments For  
Left Kettle Only !

Stirrer Rake Out  
Rotation Speed

000

Stirrer Traverse  
Speed 3

000

Discharge Conv.  
Speed

000

Cross Conveyor  
Speed

000

Stirrer Rotation  
Speed 3

000

Screen Change

Screen Change

Screen Change

Screen Change

Left Kettle  
Controls

Manual  
Controls

Home

Infeed  
Controls

Right Speed  
Controls

Right Kettle  
Controls

# Left Kettle Speed Adjustments

All of the values on this page can be set and saved to a particular Product

Stirrer  
Traverse Speed  
000

This is the speed (expressed as a percentage of full speed) at which the stirrer travels forward and back during the cook cycle.

Hood Fan  
High Speed  
000

This is the percentage of full speed at which the steam fan runs during the start of a cooking cycle.

The length of time the fan stays on HI is set on the KETTLE CONTROLS screens.

Hood Fan  
Low Speed  
000

This is the percentage of full speed at which the steam fan runs during the latter part of the cooking cycle.

There is no time setting for this.

Stirrer  
Rotation Speed  
000

This is the percentage of full speed at which the stirrer rotates during the cooking cycle.

Stirrer Rake Out  
Traverse Speed  
000

← This is the percentage of full speed at which the stirrer moves forward during rake out.

This is the percentage of full speed at which the stirrer rotates in reverse while moving forward during rake out.

Stirrer Rake Out  
Rotation speed  
000

Stirrer Traverse  
Speed 3  
000

This is the percentage of full speed at which the stirrer returns to the slive in position after rake out.

Discharge Conv.  
Speed  
000

This is the percentage of full speed at which the take out belt runs during take out.

Cross Conveyor  
Speed  
000

This is the percentage of full speed at which the cross conveyor runs.

Stirrer Rotation  
Speed 3  
000

This is the percentage of full speed at which the stirrer rotates at the fryer ends during rake out.

These buttons across the bottom of the screen are used to move to another screen.

Left Kettle  
Controls

Manual  
Controls

Home

Infeed  
Controls

Right Speed  
Controls

Right Kettle  
Controls