

| | | | |
|---|-----------------------------|--------------------|-------------------------|
| Kettle Temp 000 | RIGHT KETTLE CONTROLS | | Burner Setpoint 000 |
| Rake Out Temp 000 | Now Cooking <i>Beets</i> | | Fan Turnup Time 000 |
| Discharge Time 000 | Cool Down 000 | Slice Temp 000 | Drop Temp 000 |
| Rake Out | KETTLE READY | | Stirrer Reset |
| Stir Auto | Timed Slice Delay | | Oil Fill Automatic |
| Screen Change Screen Change Screen Change Screen Change | | | |
| Home | Right Kettle Speeds | Manual Controls | Infeed Controls |
| | | | Advanced Controls |
| | | | Left Kettle Controls |

RIGHT KETTLE CONTROLS

The RIGHT KETTLE CONTROLS screen is the same as the Left Kettle Controls screen, but this screen controls the right kettle.

The Change Screen buttons at the bottom of the screen can be used to move to another screen.