

Right Kettle Speed Adjustments

Stirrer
Traverse Speed

000

Hood Fan
High Speed

000

Hood Fan
Low Speed

000

Stirrer
Rotation Speed

000

Stirrer Rake Out
Traverse Speed

000

Speed Adjustments For
Right Kettle Only !

Stirrer Rake Out
Rotation Speed

000

Stirrer Traverse
Speed 3

000

Discharge Conv.
Speed

000

Cross Conveyor
Speed

000

Stirrer Rotation
Speed 3

000

Screen Change

Screen Change

Screen Change

Screen Change

Left Kettle
Controls

Left Speed
Controls

Home

Infeed
Controls

Manual
Controls

Right Kettle
Controls

Right Kettle Speed Adjustments

All of the values on this page can be set and saved to a particular Product

Stirrer
Traverse Speed
000

This is the speed (expressed as a percentage of full speed) at which the stirrer travels forward and back during the cook cycle.

Hood Fan
High Speed
000

This is the percentage of full speed at which the steam fan runs during the start of a cooking cycle.

The length of time the fan stays on HI is set on the KETTLE CONTROLS screens.

Hood Fan
Low Speed
000

This is the percentage of full speed at which the steam fan runs during the latter part of the cooking cycle.

There is no time setting for this.

Stirrer
Rotation Speed
000

This is the percentage of full speed at which the stirrer rotates during the cooking cycle.

Stirrer Rake Out
Traverse Speed
000

← This is the percentage of full speed at which the stirrer moves forward during rake out.

This is the percentage of full speed at which the stirrer rotates in reverse while moving forward during rake out.

→ Stirrer Rake Out
Rotation speed
000

Stirrer Traverse
Speed 3
000

This is the percentage of full speed at which the stirrer returns to the slave in position after rake out.

Discharge Conv.
Speed
000

This is the percentage of full speed at which the take out belt runs during take out.

Cross Conveyor
Speed
000

This is the percentage of full speed at which the cross conveyor runs.

Stirrer Rotation
Speed 3
000

This is the percentage of full speed at which the stirrer rotates at the fryer ends during rake out.

These buttons across the bottom of the screen are used to move to another screen.

Left Kettle
Controls

Left Speed
Controls

Home

Infeed
Controls

Manual
Controls

Right Kettle
Controls